

LAUNDRYBALL®

Eco-friendly laundry balls developed with the world's first idea patent technology



- The world's first laundry balls with silicone module
- Removal of fine dust
- Eco-friendly washing
- Strong washing power

I Semi-permanent use with excellent durability

If laundryballs have poor durability and can easily be broken, they can damage your washer.

LAUNDRYBALL® uses the special non-toxic PP(KOPELLEN P.P) so that it has excellent durability and impulse strength.



Excellent fine dust removal

We bring the polluted fine dust of outdoor clothes home.
The patented silicone module clearly removes the fine dust of clothes at the time of washing.

No residual detergent

Small amount of synthetic detergent is used for washing.
Therefore, you can be free from residual detergent of fibers safely.

Eco-friendly laundry balls for cleaning with purity

Experience stronger laundry power.
Environmental-friendly LAUNDRYBALL® keeps the health of you and your family.

Prevention of fabric damage

This product does not get clothes tangled together in the way of washing so that it prevents fabric damage.

Patented 26 silicone modules

OK for hard-to-wash jeans and sneakers
Patented 26 soft silicone modules remove old stains of sneakers and jeans clearly.

High economy

By reducing usage of synthetic detergent, it is possible to lower the pollution of the natural environment.
By shortening a washing time, it is possible to save water and energy.

Laundry batting effect

The falling impact of laundry balls helps to remove old stains of clothes, and the patented silicone brush protects clothes and reduces noise.

I LAUNDRYBALL® Laundry Directions

- Prevention of clothes from getting tangled; improved laundry efficiency
- Washing of sneakers and jeans with old stains all at once
- No fabric damage through the soft eco-friendly silicone material

STEP 01

Put LAUNDRYBALL® and your clothes in washer.

You can immediately wash them. But, it is better to wash them after they are soaked for about 30 minutes.

STEP 02

Wash in standard washing mode.

Add proper amount of detergent.

STEP 03

Take out and dry your clothes and LAUNDRYBALL®.

After the end of washing, dry LAUNDRYBALL® naturally and keep it away from direct sunlight.

| TIP |

- When you want to remove old stains of jeans or sneakers
- When you go out on the day of fine dust or yellow dust
- When you want stronger washing power
- When your skin is sensitive to synthetic detergents
- When you need a present for a housewarming or business

- ✓ No chemicals harmful to the human body are used.
- ✓ The soft silicone material does not damage your clothes to wash.



| Attention in Use |

1. Keep the product away from direct sunlight.
2. The product is inflammable. Therefore, keep it away from a fire or heat.
3. Keep the product away from the touch of young children.
4. The brush can be taken out in use. But, it does not mean that the product has a defect. The brush is designed to be attachable and detachable.
5. In case of drum washer, if there are small clothes to wash, it is possible to make a large sound.
6. After the end of washing, do not put LAUNDRYBALL® in dryer.

LAUNDRYBALL®



Product specification

<input type="checkbox"/>		Product Material	PP, TPE
		Dimension	125 * 135mm
<input checked="" type="checkbox"/>		Weight	272g
		Country of manufacture	KOREA

Korea Hot Fix Co.

1318, Bogwang-ro, Gwangtan-myeon, Paju-si, Gyeonggi-do, Korea (Postal Code: 10951)

Tel. 82-31-977-0888 / Fax. 82-505-116-3888 / E-mail. bestcanofix@naver.com

